

Aquafighter®: Purify and Protect keeps diesel fuel and tanks water-free

:ConidiaBioscience

www.aquafighter.com www.conidia.com








# A true revolution in fuel quality management and fuel tank maintenance

- Long-term & short-term savings on maintenance and capital equipment
- Demulsifies diesel & biodiesel blends by maintaining water level within fuel specification in the tank at all times
- Protects fuel tank from microbial growth, corrosion and other related damages due to water accumulation
- Non-toxic, safe to handle and safe for the environment
- Stops the domino-effect of water damage from the tank through the fuel system to the engine
- Manages fuel-quality and fuel tank condition better than other solutions combined



before

after

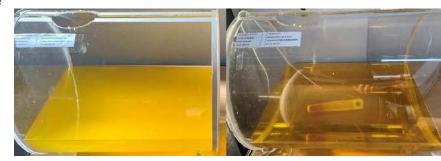

### Water is the enemy of stored fuel

Aquafighter will protect your fuel and tank from excess water that is generated over time.

Presence of water in a diesel tank is inevitable. This is an everyday battle, independent of tank size and where ever you are in the world. Free and entrained water is generated in your tank through air condensation, fuel supply, ineffective filtration and improper system design. It can also come through leaks, accidents and thievery. When water is allowed to accumulate in your tank, significant damage including tank corrosion can occur.


#### How does **Aquafighter**® work in the fuel tank?

Aquafighter is effective in reducing and removing water inside the fuel tank. This is accomplished through 3 indispensable actions that are necessary to achieve the desired fuel purity and consequently provide tank protection.

- **Demulsifies** water by physico-chemical adsorption of water molecules to less than 65ppm total fuel water content with maximum efficiency. (Aquafighter causes water to release naturally from fuel and it achieves this without adding to or altering the fuel, unlike certain fuel additives would do. After market additives can cause corrosion themselves)
- Attracts & Captures water immediately upon release from the fuel molecules
- **Isolates** water in its protective gel to permanently segregate it from the fuel & tank environment so your fuel & tank is protected at all times. (Aquafighter will encapsulate the water preventing corrosion, microbial growth & re-emulsification until it is removed from the tank)

Note: With biodiesel, fuel becomes significantly more hygroscopic, which means it attracts water. Thus, the fuel becomes emulsified with water rather than to allow the water to separate to the tank bottom.

### Aquafighter® tank opening & product fit guide

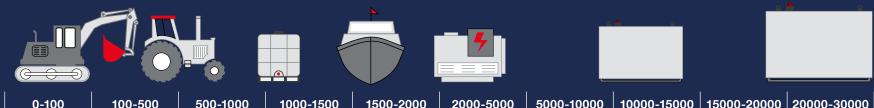

Tank Capacity Tank Opening	0-100 litres	100-500 litres	500-1000 litres	1000-1500 litres	1500-2000 litres	2000-5000 litres	5000-10000 litres	10000-15000 litres	15000-20000 litres	20000-30000 litres	30000+ litres
38-90mm 1.5-3.5"	<b>Finger</b> (12 months)	<b>Snake</b> (12 months)	Snake (6 months) Twin Snake (12 months)	Snake (4 months) Twin Snake (8 months) Triple Snake (12 months)	Snake (3 months)  Twin Snake (6 months)  Triple Snake (9 months)  Quad Snake (12 months)						
90-150mm 3.5-6"			Anaconda (24 months)			Anaconda (12 months)	Anaconda (6 months)  Twin Anaconda (12 months)	Anaconda (4.5 months)  Twin Anaconda (9 months)	Anaconda (3 months) Twin Anaconda (6 months)		
150-300mm 6-12"	Medium Canvas (12 months)  Large Canvas (24 months)					Medium Canvas (6 months) Large Canvas (12 months)	Large Canvas (6 months)	Large Canvas (4.5 months)	Large Canvas (3 months)		
300-600mm 12-24"	<b>Large Canvas</b> (24 months)					Large Canvas (12 months)	Large Canvas (6 months)	Large Canvas (4.5 months)	Large Canvas (3 months) uel Station M (24 months)	(12 months)	2+ Fuel Station Mats (12 months)
600mm+ 24"+									Depot		

- Check the opening size of the tank first, and then the capacity of the tank. Choose an Aquafighter that suits your maintenance schedules.
- The period shown is the maximum time that the Aquafighter should be left in place between changes.
- Ensure you check periodically that the Aquafighter has not become saturated, particularly after first time use.
- Avoid leaving in place when fuel tank is in motion, particularly where the Aquafighter might block the fuel intake.
- These are estimates and needs could differ based on fuel quality, tank conditions and fuel quantity.

Aquafighter® removes and captures emulsified water from fuel as well as free water from the bottom of the fuel tank

#### **Installation Instructions:**

- Remove Aquafighter from the sealed bag and disperse the powder evenly throughout each chamber of the fabric pouch
- Insert Aquafighter into the bottom of your fuel tank away from the fuel intake
- Tie off the Aquafighter under the fuel cap or outside of the fuel cap leaving only enough slack to lay the Aquafighter flat on the bottom of the fuel tank
- Check the Aquafighter periodically for water content and replace when at or close to capacity. (Aquafighter is designed for each chamber to fill exactly halfway for easy removal)
- Dispose of Aquafighter in the proper waste receptacle required by local law
- Immediately replace Aquafighter in the tank to keep fuel pure and remain protected from water at all times
- Do not install Aquafighter into an opening smaller than the specified size of the particular Aquafighter product













Aquafighter 999.020

# **Finger**

Length: 20 cm Width: 4 cm

200ml Capacity

Dry Weight = 70g

Dry Weight w/ Box Packaging = 150g

Designed for small machines and tanks under 100 liters with openings between 3.8cm and 9cm.

Aquafighter 999.026

#### **Snake**

Length: 50 cm Width: 4 cm

500ml Capacity

Dry Weight = **190g** 

Dry Weight w/ Box Packaging = 260g

Designed for machines, boats and tanks with openings between 3.8cm and 9cm and under 500 liters. For larger tanks, the Snake can be used but with more frequent replacement. This is the most popular Aquafighter for tanks with smaller openings.





Aquafighter 999.027-1

#### **Twin Snake**

Length: 100 cm Width: 4 cm

1 liter Capacity

Dry Weight = 255g

Dry Weight w/ Box Packaging = **340g** 

Designed for machines and tanks with openings between 4cm and 9cm that are between 500 and 1000 liters.

Aquafighter 999.027-2

## **Triple Snake**

Length: 150 cm Width: 4 cm

1.5 liter Capacity

Dry Weight = **310g** 

Dry Weight w/ Box Packaging = **390g** 

Designed for storage tanks with openings between 4cm and 9cm that are between 800 and 1200 liters.

Requires opening of at least 3.8cm (1.5 inch)

Aquafighter brochure

page 9





Aquafighter 999.027-3

### **Quad Snake**

Length: 200 cm Width: 4 cm

2 liter Capacity

Dry Weight = 360

Dry Weight w/ Box Packaging = **440g** 

Designed for storage tanks with openings between 4cm and 9cm that are between 1000 and 1500 liters.



Aquafighter 999.028

### **Anaconda**

Length: 150 cm Width: 9 cm

4 liters Capacity

Dry Weight = **510g** 

Dry Weight w/ Box Packaging = **630g** 

Designed for machines and tanks with openings of at least 9cm.





# **Twin Anaconda**

Length: 300 cm Width: 9 cm

8 liters Capacity

Dry Weight = 650g

Dry Weight w/Box Packaging = 775g

Designed for fuel stations and other large tanks with opening of at least from 9cm.

Aquafighter 999.021

# **Medium Canvas**

Length: 35 cm Width: 27 cm

2.5 liters Capacity

Dry Weight = 450g

Dry Weight w/Box Packaging = **575g** 

Designed for storage tanks 500-5,000 liters with access of at least 12cm.





Aquafighter 999.022

# Large Canvas

Length: 70 cm Width: 27 cm

4 liters Capacity

Dry Weight = 960g

Dry Weight w/Box Packaging = 1,092g

Designed for storage tanks 5,000-10,000 liters with access of at least 16cm. Multiple filters and more frequent replacement can be used for bigger tanks.

Requires opening of at least 15.25cm (6 inch)

Aquafighter 999.042 (Industrial)

# Fuel Station Mat

Length: 200 cm Width: 100 cm

**40** liters Capacity

Dry Weight = **2,800g** 

Dry Weight w/Box Packaging = **3,200g** 

Designed for fuel stations and other large tanks with manhole access of at least 30cm and capacity of more than 15,000 liters. Multiple filters can be used for larger tanks.







Aquafighter 999.030 (Industrial)

### **Depot**

Length: 800 cm Width: 50 cm

**60** liters Capacity

Dry Weight = **TBD** 

Dry Weight w/Box Packaging = **11,110g** 

Designed for depot and terminal tanks that are at least 9 meters high and have at least 30cm manhole access. The Aquafighter Depot is designed to hang above the "free water" level to remove bound water only. Multiple filters can be used for even bigger tanks.

Requires opening of at least 60cm (24 inch)

Aquafighter 999.023

# Refillable Dipstick Indicator

Length: 20 cm Width: 3.8 cm

Approx. 100ml Capacity

Dry Weight = 135g (4.8oz)

Designed as bound water indicator for fuel tanks with a dipstick pipe.

Requires dipstick pipe of 3.8cm (1.5 inch)







## **Dipstick Indicator Refill**

5 pieces

Length: 20 cm Width: 4 cm

Approx. 100ml Capacity

Dry Weight = 150g (5.3oz)

Replacement filter for Dipstick Indicator and also can be used as a much more effective replacement for tank paste.

# **FUELSTAT®**

# FUELSTAT® Diesel Fuel Test Kit

Single boxed test kit: MD-011B

Box of 8 test kits: FMD8

Microbial contamination test kit for Diesel and Middle Distillate fuels

- The ultra-simple test that just requires 4 drops of sample
- 15 minutes to result as opposed to 4-7 days!
- 'Test at the tank' technology no laboratory required
- No requirement for additional equipment or sterility measures





**Aquafighter®** and **FUELSTAT®** are exclusively available from Conidia Bioscience and are distributed globally through a network of distributor partners

HEADQUARTERS & GLOBAL SALES OFFICE

US SALES OFFICE

Conidia Bioscience Ltd Bakeham Lane, Egham, Surrey, TW20 9TY, UK +44 (0)1491 829102 info@conidia.com Conidia Bioscience Inc 15 Briarwood Ln, Dover, NH, 03820, USA +1 844 438 3578 info@conidia.com

www.aquafighter.com

www.conidia.com